




DB15 Pin-Outs

If your Alicat Instrument was ordered with a DB15 connection, please be sure to reference the appropriate pin-out diagram.

DB15 Pin-Out

Pin Number	Function
2	Signal Out
5	Supply
8	Tare (meters) Set-Point (controllers)
9	Ground
11	Secondary Out
13	RS-232 RX RS-485 -
15	RS-232 TX RS-485 +

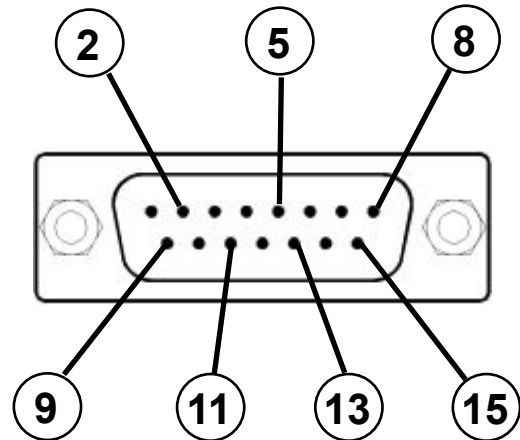

Note: The above pin-out is correct for units with a **DB15** pin-out. If your unit is marked **DB15H** or **DB15K**, you must use the correct pin-out (as shown on the following page).