

PROFIBUS Pin-Outs

If your Alicat Instrument was ordered with a PROFIBUS connection, please be sure to reference the following pin-out diagram.


Power and Signal Connections:

Connect to the device using two DB9 connectors.


The female top connection is PROFIBUS.

The male connection on the side is power and RS-232 or RS-485.

Pin out diagrams for all PROFIBUS enabled Alicat devices are shown below.

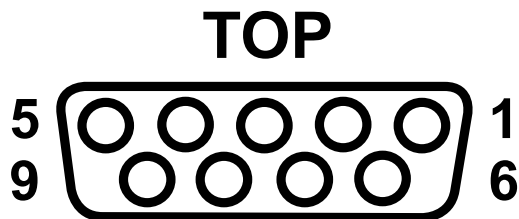

1. NC
2. OPT GND
3. DP
4. RTS
5. DGD
6. VP
7. OPT 7 to 30VDC
8. DN
9. NC

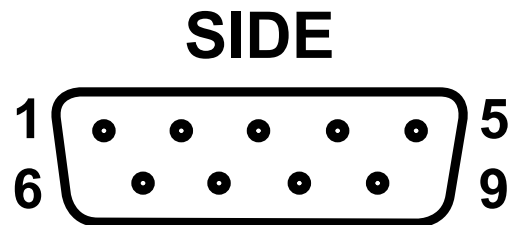

1. NC
2. RS232TX
3. RS232RX
4. NC
5. GND
6. NC
7. 7 to 30VDC
8. GND
9. NC